


# Pedestal Count and Spacing for Standard Maple Benches

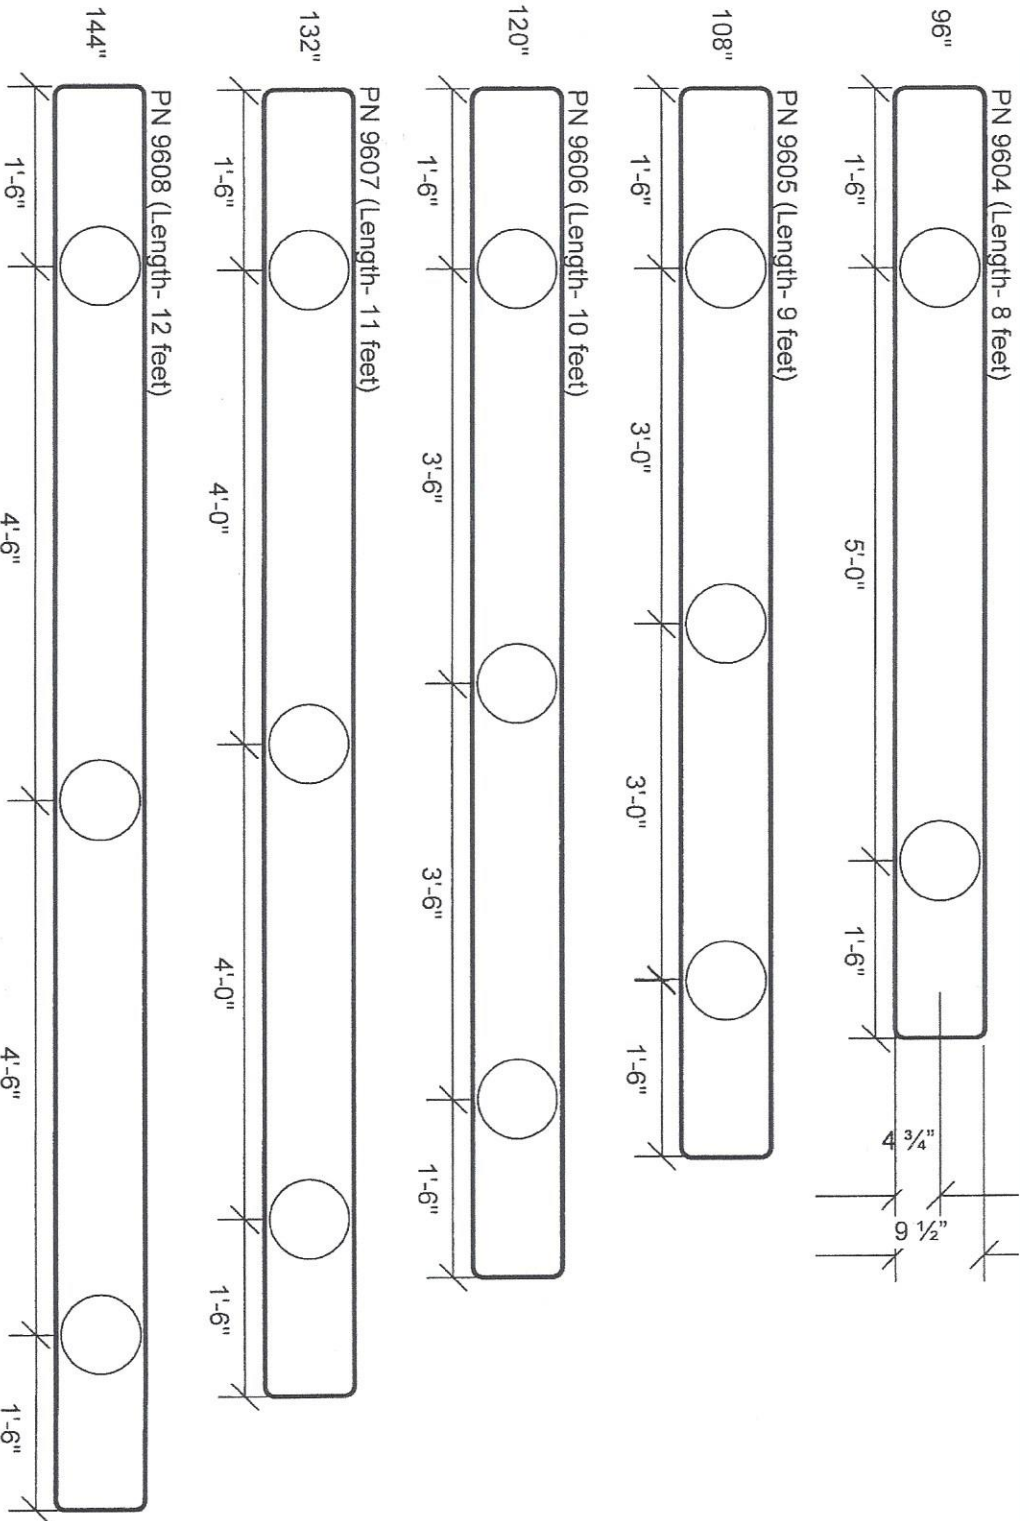

Recommended pedestal locations apply to all pedestal types except as noted.

Hardware for attachment to benches is included with pedestals. Pilot holes must be drilled by the installer/end-user. Use appropriate hardware (not included) for anchoring pedestals to the floor.

**ROBINSON STEEL CO.**  
 Locker, Storage Solutions  
 and Restroom Supplies  
 at the Right Price!



Phone: (610) 279-6600  
 Fax: (610) 279-6646  
 Toll free: (800) 275-6702  
 Email: [sales@rsclockers.com](mailto:sales@rsclockers.com)