

BREEZE

Setup Steps

1. Admin Login

After the Breeze is powered up, tap the screen once to start. Once on the next screen, tap the upper right corner of the screen (where the clock is) several quick times until the login screen appears and enter the provided admin username and password.

2. Set the Breeze to Public

After logging in, you'll be brought to the Menu. From here, navigate to Menu > System Settings > Mode Settings. In the Mode Settings window, ensure that the Breeze is set to "Public".

3. Set the Breeze to One Locker Per User

Navigate to Menu > System Settings > Operation Settings > Locker Quantity. On this screen, select "One Locker Per User".

4. Set the Breeze for Different Locker Sizes

Navigate to Menu > System Settings > Operation Settings > Locker Size. On this screen, select "Large, Medium, Small".

5. Let Users Choose a Locker


Navigate to Menu > System Settings > Operation Settings > Save Allocation. On this screen, select "User Own Choose".

6. Set Number of Lockers

Ensure that the correct number of lockers is programmed into the HMI by navigating to Menu > Factory Settings. On this screen, add up the number of lockers listed in the column "Quantity" and make sure it equals the total number of lockers on the Breeze.

7. Set Locker Size

Navigate back to Menu. Then navigate to Menu > Locker Manage. On this screen, there are several columns. In the size column, tap each locker and assign it the respective size based on the number.

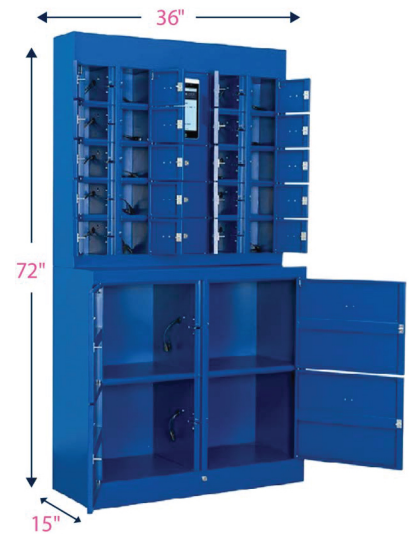

Using the Mechanical Overrides:


There is a mechanical override built in to the Breeze so users can retrieve their items from the locker in the even that the unit loses power.

To open three center lockers:

Open the locker using the included key. Locate the red knob on the bottom left of the locker (see right photo). Pull up on knob fully and the center lockers will open.


To open four large bottom lockers:

Use the included key to operate the lock at the very bottom of the unit which will open these four lockers.

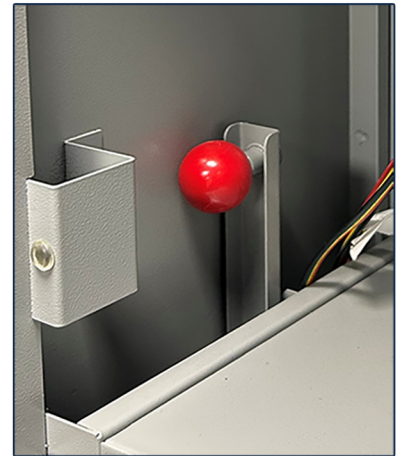

To open small lockers on left or right:

Use the access key to open the top electronics box (see above photo). Locate the handles with red knobs on the left and right side. Pull these levers to open the left or right two rows of lockers.

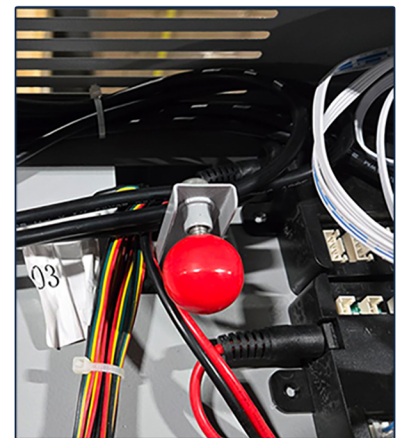

NOTE: This does NOT clear user data; it only opens the physical lockers. See below for how to clear user data.

How to Clear a Single User's Data:

Navigate to Menu > Locker Manage.
Then in the column "Operate", tap "clear" to clear/open that specific locker.

How to Clear All User Data:

Navigate to Menu > Locker Manage.
Then tap "Clear All" in the top right corner.