


Pedestal Count and Spacing for Standard Maple Benches

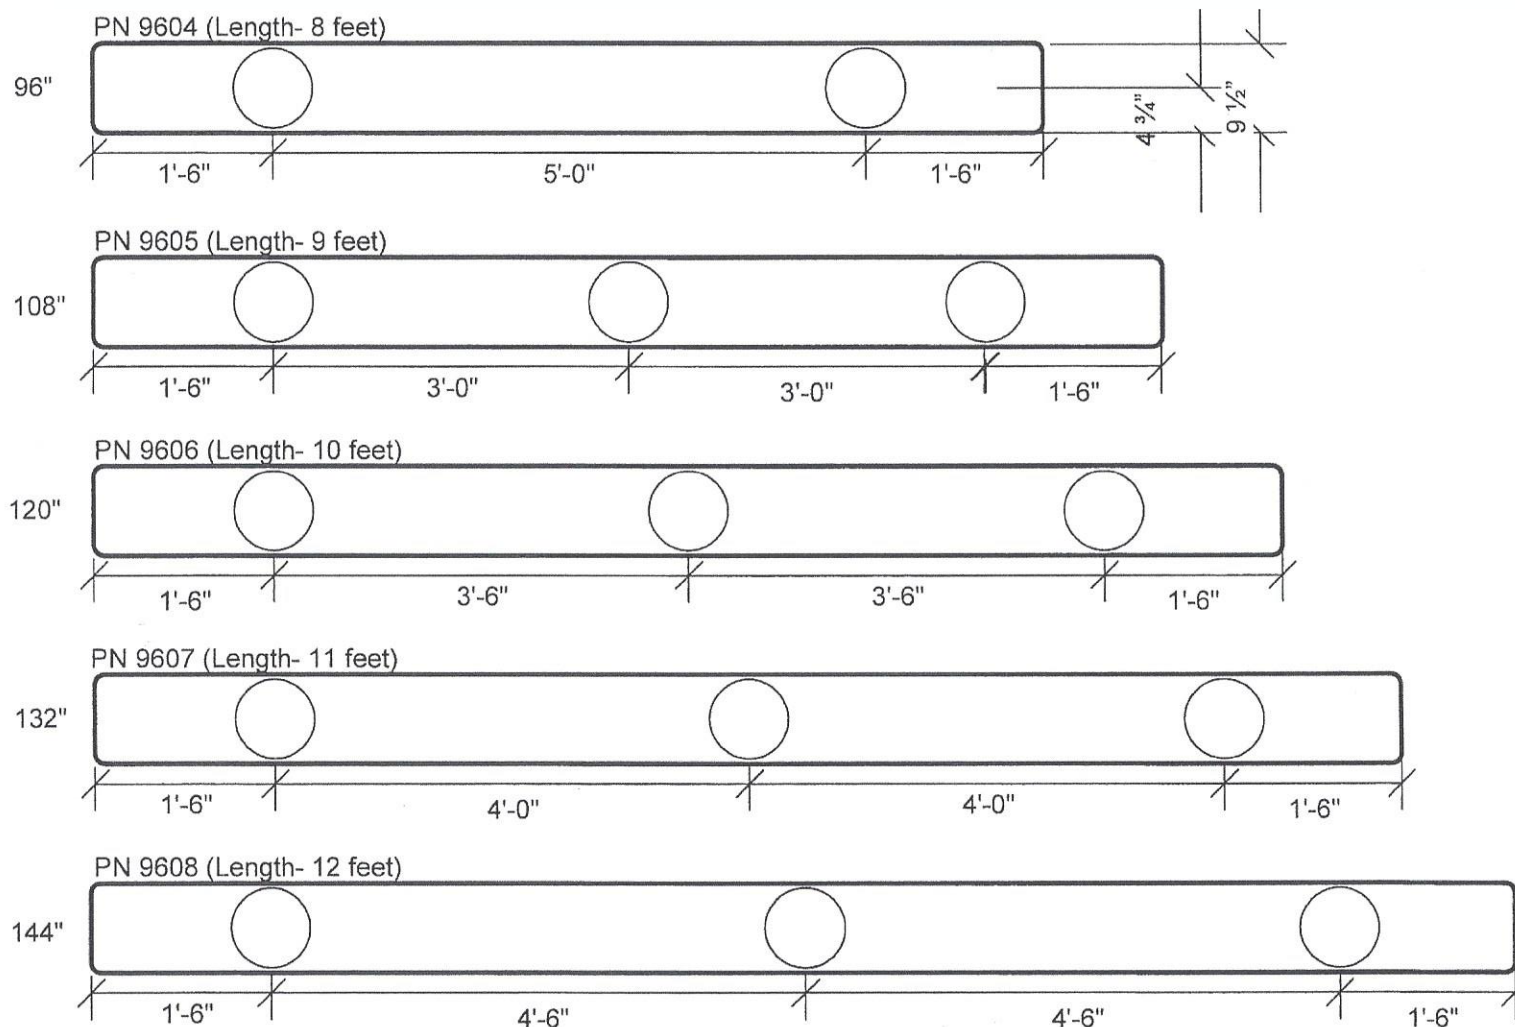

Recommended pedestal locations apply to all pedestal types except as noted.

Hardware for attachment to benches is included with pedestals. Pilot holes must be drilled by the installer/end-user. Use appropriate hardware (not included) for anchoring pedestals to the floor.

ROBINSON STEEL CO.

*Locker, Storage Solutions
and Restroom Supplies
at the Right Price!*



Phone: (610) 279-6600

Fax: (610) 279-6646

Toll free: (800) 275-6702

Email: sales@rsclockers.com