


## GENERAL ASSEMBLY FOR PEDESTALS

USING THE PEDESTAL AS A TEMPLATE, LOCATE CENTERS. DRILL  $3/16"$  HOLES AND ATTACH WITH THE SCREWS PROVIDED. FLOOR ANCHORS ARE PROVIDED BY THE INSTALLER. RECOMMENDED HILTI ALUMINUM HIT ANCHORS CAT. NO. 5400192 OR  $1/4" \times 2"$  TAP-COM.

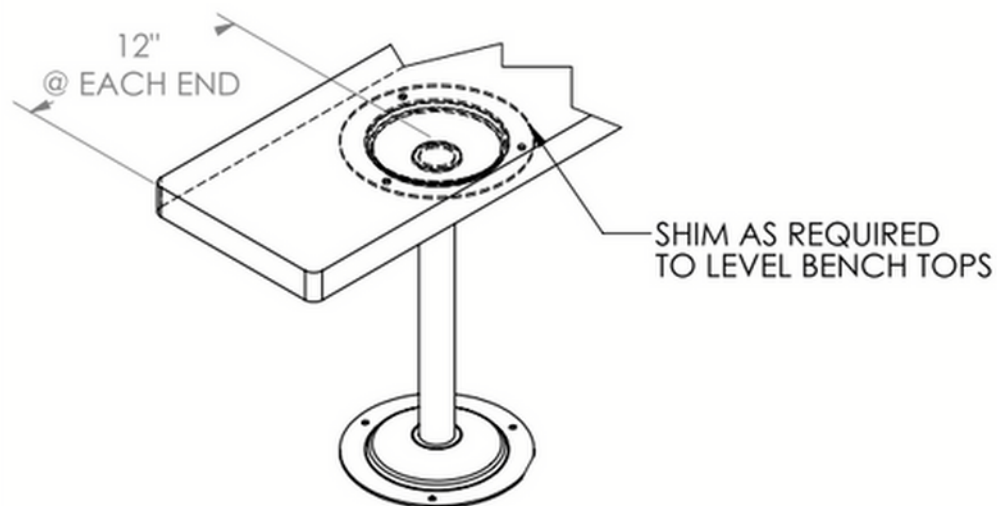

### PEDESTAL ARRANGEMENT

ALL PEDESTALS TO BE LOCATED 12" FROM EACH END WITH A MAXIMUM OF 6'0" SPACING. ON BENCH LENGTHS GREATER THAN 8'0", (3) PEDESTALS ARE REQUIRED.

## 8032 PEDESTAL ANCHORING

